

40015288

Montageanleitung - Instrucciones de montaje - Instructions de montage
Assembly Instructions - Istruzione di montaggio - Montagehandleiding - Instrukcja montazu





ACHTUNG, OBERFLÄCHE WIRD SEHR HEISS
ATENCIÓN, SUPERFICIE MUY CALIENTE
ATTENTION SURFACE TRÈS CHAUDE
CAUTION, HOT SURFACE
ATTENZIONE: SUPERFICIE ESTREMAMENTE CALDA
OPGELET! HEEL WARM OPPERVLAK
UWAGA, BARDZO GORĄCA POWIERZCHNIA



NICHT BEDECKEN
NO CUBRIR
NE PAS COUVRIR
DO NOT COVER
NON COPRIRE
NIET BEDEKKNIE
NIE PRZYKRYWAC

Original mounting instruction 07/27/16 PVA

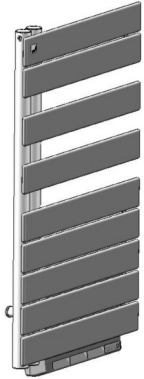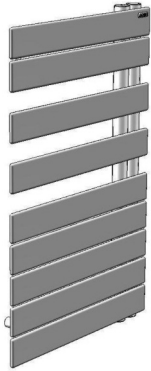

	H		H		H
FL081-055	805	TFR050-055IFW	870	ROFER09-55/IFS	870
FL118-055	1183	TFR075-055IFW	1248	ROFER13-55/IFS	1248
FL168-055	1676	TFR100-055IFW	1741	ROFER18-55/IFS	1741
FR081-055	805	ROFR090-55/IFS	834	ROFEL09-55/IFS	870
FR118-055	1183	ROFR130-55/IFS	1212	ROFEL13-55/IFS	1248
FR168-055	1676	ROFR180-55/IFS	1705	ROFEL18-55/IFS	1741
TFL050-055-IF	893	ROFL-080-055	805	ROFEL-080-55/TF	852
TFL075-055-IF	1271	ROFL-120-055	1183	ROFEL-120-55/TF	1230
TFL100-055-IF	1764	ROFL-170-055	1676	ROFEL-170-55/TF	1723
TFR050-055-IF	893	ROFR-080-055	805	ROFER080-55/IF	893
TFR075-055-IF	1271	ROFR-120-055	1183	ROFER120-55/IF	1271
TFR100-055-IF	1764	ROFR-170-055	1676	ROFER170-55/IF	1764
TFR050-055TF	852	ROFL090-55/IFS	834	ROFEL080-55/IF	893
TFR075-055TF	1230	ROFL130-55/IFS	1212	ROFEL120-55/IF	1271
TFR100-055TF	1723	ROFL180-55/IFS	1705	ROFEL170-55/IF	1764

